

6LE00349A



TYM632C
Output 12gang shutter/blind
230 V AC

TXM632C
Output 12gang shutter/blind
230 V AC

GB



Design and layout of the device

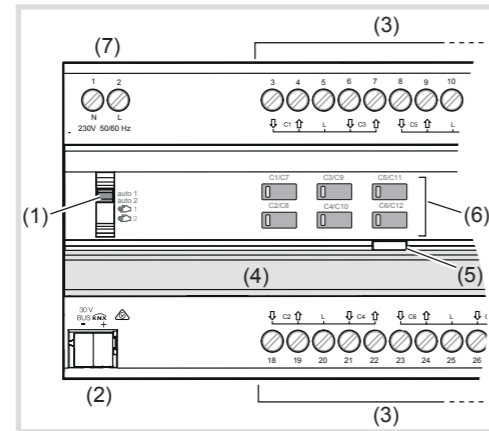


Figure 1: Device overview

- (1) Slide switch **auto1/auto2**/1/2
- (2) KNX bus connection terminal
- (3) Connections of loads
- (4) Labelling field with cover
- (5) Illuminated programming button
- (6) Operation button for manual operation per output with status LED
- (7) Mains power supply connection

Function

System information

This device is a product of the KNX system and corresponds to the KNX guidelines. Detailed specialised knowledge obtained from KNX training courses is required for understanding. The planning, installation and commissioning of the device is carried out with the help of KNX-certified software.

Systemlink commissioning:

The function of the device is software-dependent. The software is to be taken from the product database. You can find the latest version of the product database, technical descriptions as well as conversion and additional support programmes on our website.

Easylink commissioning:

The function of the device is configuration-dependent. The configuration can also be done using devices developed specially for simple setting and start-up.

This type of configuration is only possible with devices of the easylink system. Easylink stands for easy, visually supported start-up. Preconfigured standard functions are assigned to the in/outputs by means of a service module.

Functional description

The device is used to control motor-operated building fittings such as shutters and blinds via the KNX bus. The device has 12 outputs from which each output can be activated independently.

Correct use

- Switching electrically operated motors of 230 V AC for blinds, shutters, awnings and similar hangings
- Mounting on DIN rail according to DIN EN 60715 in the distribution box

Product characteristics

- independent outputs, activation via KNX bus
- Status display of the outputs on the device
- manual activation of the outputs on the device possible, building site operation
- Position can be started directly
- 3 Alarms
- Scene function

- Forced position by higher-level controller
- Connection of various external conductors possible
- Slat position directly controllable

Operation

Manual operation switch on/off

Bus and mains power supply are present.

- Push switch (1) to position 1/2.

Manual operation is switched on, the outputs can be controlled using the operation buttons (6) independently of each other.

1 switches on the control of the outputs C1 .. C6.

2 switches on the control of the outputs C7 .. C12.

During manual operation, the controller is deactivated via the KNX bus.

Systemlink commissioning: Depending on the programming, the manual operation is activated permanently or for a time period configured via the application software. If the manual operation is blocked via the application software, no activation takes place.

Or:

- Move switch (1) to position **auto1/auto2**.

The manual operation is switched off. Operation takes place solely via the KNX bus. The output adopts the position predefined by the bus controller. The switching status is displayed via the status LED of the operation button (6).

auto 1 displays the status of the outputs C1 .. C6.

auto 2 displays the status of the outputs C7 .. C12.

Operating outputs in manual operation

Operation takes place per output by briefly pressing the operation button repeatedly (table1).

| Status | Behaviour when button pressed briefly |
|--|--|
| Output is in idle state, status LED of the button (6) is off. | Movement operation starts. Status LED of the button (6) lights up. ¹⁾ |
| Output active, status LED of the button (6) lights up. ¹⁾ | Movement operation stops, LED goes out. |

¹⁾ The LED lights up red during upward travel and green during downward travel.

Table 1: Manual operation

Information for electricians

Installation and electrical connection



DANGER!
Touching live parts can result in an electric shock!
An electric shock can be lethal!
Disconnect the connecting cables before working on the device and cover all live parts in the area!



CAUTION!
Risk of destruction if parallel connection of several motors on one output!
Final position switches could fuse together. Motors, hangings and the device may be destroyed!
Only connect one motor per output!

Installing the appliance

Observe temperature range. Provide sufficient cooling.

- Mount device onto DIN rail in accordance with DIN EN 60715.

Connecting the device (Figure 2)

The installation circuit must be protected via circuit breaker 10 A.

- Connect bus cable via connecting terminal (2).
- Connect mains voltage (7).
- Connect motors.

Start-up

Systemlink: Loading physical address and application software

The switch (1) is in **auto1/auto2**.

- Switch on bus voltage.
- Press programming button (5).
The button lights up.

If the button does not light up, no bus voltage is present.

- Load the physical address into the device.
Status LED of the button goes out.
- Load application software.
- Note down the physical address on the labelling field (4).

Easylink:

Information on the system configuration can be taken from the extensive description of the service module easylink.

Starting up the device

- Switch on mains voltage on the outputs.
- Switch on mains supply.

Determine operation time and slat adjusting time

In blind/roller shutter operation, the operation time for positioning the sunshade is important. The position is calculated based on the operation time. The slat adjusting time for slat blinds, determined by the design, is part of the total operation time. The opening angle of the slats is therefore set as operation time between opened and closed position.

The operation time for UP is normally longer than the operation time for DOWN and must be measured separately if necessary.

- Measure UP and DOWN operation time of the hanging.
- Measure slat adjusting time between OPEN and CLOSED.
- Enter measured values into the parameter setting – **running time...** or **slat step time**.

Functional test

The functionality of the outputs is displayed via the status LED of the operation button (6).

Appendix

Technical data

| | |
|---|---|
| KNX medium | TP 1 |
| Configuration mode | S-Mode, E-Controller |
| Rated voltage KNX | 30 V SELV |
| Own consumption on the KNX bus: | |
| - typical | 7 mA |
| - in standby | 5 mA |
| Auxiliary voltage | 230 V AC, + 10 % .. - 15 % 240 V, + 6 % .. - 6 % |
| Mains frequency | 50/60 Hz |
| Power dissipation maximum | 3 W |
| Own consumption on mains: | |
| - maximum | 5 W |
| - in standby | 0.2 W |
| Breaking capacity | μ230 V, 4 AAC1 |
| Switching current at cos Φ = 0.6 | max. 4 A |
| Operating altitude | max. 2000 m |
| Degree of contamination | 2 |
| Surge voltage | 4 kV |
| Degree of protection of housing | IP 20 |
| Degree of protection of housing under front panel | IP30 |
| Impact protection | IK 04 |
| Overvoltage class | III |
| Operating temperature | -5 ... +45°C |
| Storage/transport temperature | -20°C ... +70°C |
| Maximum switching cycle rate at full load | 6 switching cycle/minute |
| Connection capacity | 0.5 mm ² ... 6 mm ² |
| Standards | EN50491-3 ; EN60669-2-1 |
| Dimension | 10 TE, 10 x 17.5 mm |

Troubleshooting

Manual operation not possible

Cause 1: Switch (1) not moved to 1/2.

Move switch to 1/2.

Cause 2: Manual operation has not been enabled (Systemlink).

Enable manual operation via application software.

Bus operation is not possible

Cause: Bus voltage is not present.

Check bus connection terminal for correct polarity.

Check bus voltage by briefly pressing the programming button (5), red LED lights up if bus voltage is present.

If mains voltage is available without bus voltage - red LED of the programming button (5) blinks.

Cause 2: Manual operation is active. Switch (1) is in position 1/2.

Move switch (1) to position **auto1/auto2**.

Shutters/blinds do not move to the final position

Cause: Operation time for the shutters/blinds set incorrectly.

Check operation times. Measure again and reprogram if necessary.

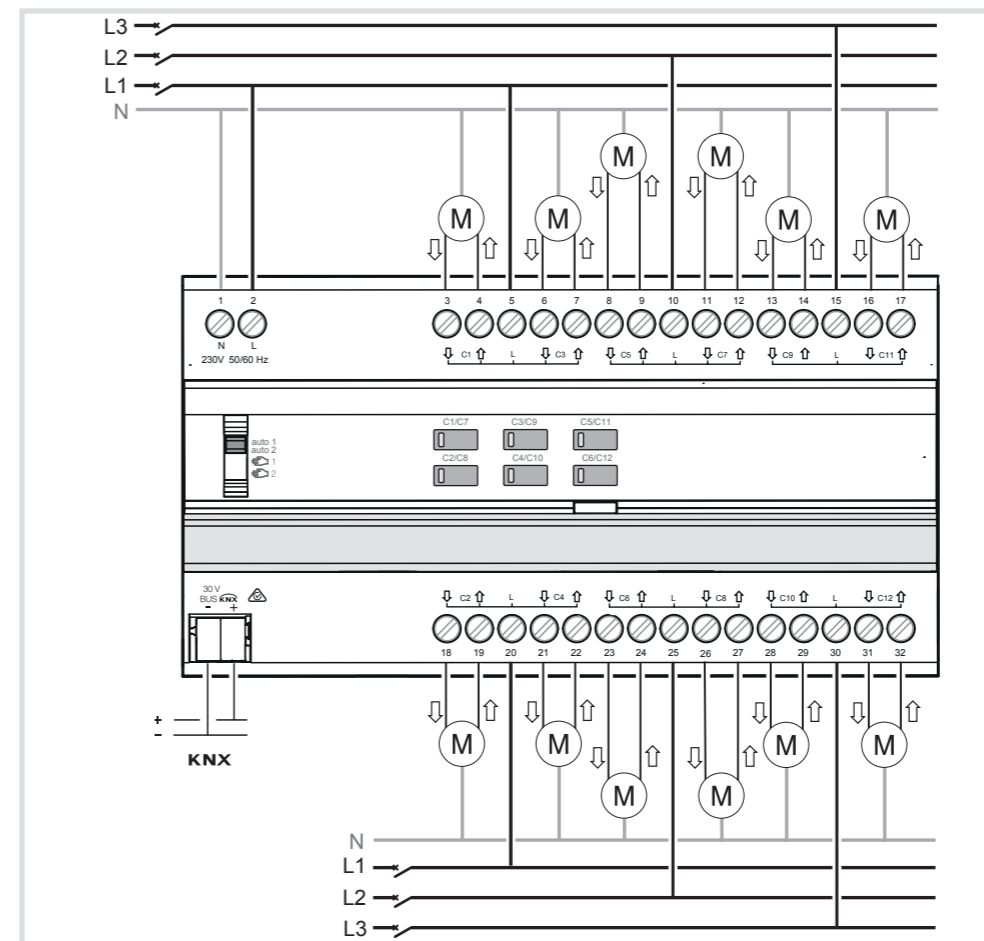


Fig 2: Device connection

